

---

# GRIP HEATERS

---

*PLEASE READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION*

- REMOVE YOUR EXISTING/STOCK GRIPS.
- REMOVE OLD GRIP HEATER ELEMENTS FROM HANDLEBAR
- THE SURFACE AREA OF THE HANDLEBAR MUST BE CLEANED. MAKE SURE IT IS FREE OF ANY OLD GLUE OR RESIDUE WHERE THE NEW GRIP HEATERS WILL BE INSTALLED.
- CONNECT THE HEATER ELEMENT WIRES TO THE SNOWMOBILE'S EXISTING GRIP HEATER WIRES AS FOLLOWS
  - WHITE : HI
  - BLACK : LOW
  - RED : COMMON OR GROUND
- PEEL OFF THE ADHESIVE BACKING ON THE GRIP HEATERS. INSTALL THEM ONTO THE HANDLEBAR WHERE YOUR HANDS WILL BE POSITIONED WHEN RIDING. IT IS RECOMMENDED THAT YOU INSTALL THE HEATERS SO THAT THE WIRES ON THE ELEMENTS ARE FACING UP AND THE ELEMENT WRAPS AROUND THE HANDLEBAR AND COMES TOGETHER AT THE BOTTOM.
- INSTALL GRIPS. MAKE SURE NOT TO DAMAGE THE GRIP HEATER ELEMENTS.
- DOUBLE CHECK FUNCTION OF GRIP HEATERS IN ALL TEMPERATURE SETTINGS TO ENSURE PROPER FUNCTION.
- CHECK TO ENSURE THAT YOU HAVE PROPER FUNCTION OF ALL THE CONTROLS (INCLUDING THROTTLE CABLE, BRAKE CABLE/LINE AND STEERING FUNCTION) BEFORE OPERATING YOUR SNOWMOBILE.

**WARNING:** THESE GRIP HEATER ELEMENTS ARE INDENTED FOR HI HEAT OUTPUT AND MAY OFFER AN INCREASED HEAT LEVEL. WHEN USING, IF TOO HOT TURN DOWN THE TEMPERATURE SETTING TO A LOWER TEMPERATURE SETTING OR SIMPLY TURN OFF TO AVOID ANY POTENTIAL BURNING OR GRIP MELTING. WE ASSUME NO RESPONSIBILITY OR LIABILITY FOR ANY DAMAGE OR INJURY CAUSED BY IMPROPER USE OF THESE GRIP HEATERS.